

SE-HT SERIES

SE-HT-35U

Air source high-temperature heat pump delivering sanitary hot water up to 80 °C. R134A scroll circuit, three-phase, vertical discharge.

www.sunnivaencon.com
+91 93213 65103
sales@sunnivaencon.com



HEATING CAPACITY

34.9 kW

At T1 · A20 °C / W60 °C

PEAK COP

4.1

At T1 · A20 °C / W60 °C

MAX WATER TEMP

80 °C

Rated outlet 75 °C

HOT WATER OUTPUT

750 LPH

At T1 · A20 °C / W60 °C

Performance

Rated output at each test condition

T1 A20 °C / W60 °C

Heating capacity	34.9 kW
Power input	8.5 kW
COP	4.1
Hot water output	750 LPH

T2 A20 °C / W70 °C

Heating capacity	32.6 kW
Power input	9.8 kW
COP	3.3
Hot water output	560 LPH

T3 A20 °C / W80 °C

Heating capacity	30.6 kW
Power input	11.3 kW
COP	2.7
Hot water output	440 LPH

Technical specifications

SE-HT-35U

ELECTRICAL SUPPLY

Power supply	—	380–415 V / 50 Hz / 3 Ph
Rated current	A	21.2
Required MCB	—	32 A × 4 pole
Required cable	—	4 core × 4 sq.mm copper cable + earthing

REFRIGERATION CIRCUIT

Compressor	—	Scroll (Copeland / Panasonic)
Number of compressors	Nos	1
Refrigerant	—	R134A
Heat exchanger (condenser)	—	Tube-in-shell / Brazed plate heat exchanger
Evaporator	—	Blue finned evaporator coil
Throttling device	—	Thermostatic / Electronic expansion valve
Fan quantity	Nos	1

WATER CIRCUIT

Rated water temperature	°C	75
Maximum water temperature	°C	80
Water flow	m ³ /hr	6.1
Water pressure drop	kPa	≤ 56
Water pipe size	inch	R1

UNIT & ACOUSTICS

Dimensions (L × W × H)	mm	800 × 800 × 1110
Net weight	kg	350
Noise at 1 metre	dB(A)	≤ 69


TEST CONDITIONS

T1 — Ambient 20/15 °C (DB/WB), E.T. 10 °C, C.T. 65 °C
T2 — Ambient 20/15 °C (DB/WB), E.T. 10 °C, C.T. 75 °C
T3 — Ambient 20/15 °C (DB/WB), E.T. 10 °C, C.T. 85 °C

INSTALLATION REQUIREMENT

Dedicated **32 A × 4 pole** MCB required at the unit.
 Supply cable **4 core × 4 sq.mm** copper, with separate earthing.
 Maintain water flow of **6.1 m³/hr**; pressure drop across the unit ≤ 56 kPa.

Site installation schematic

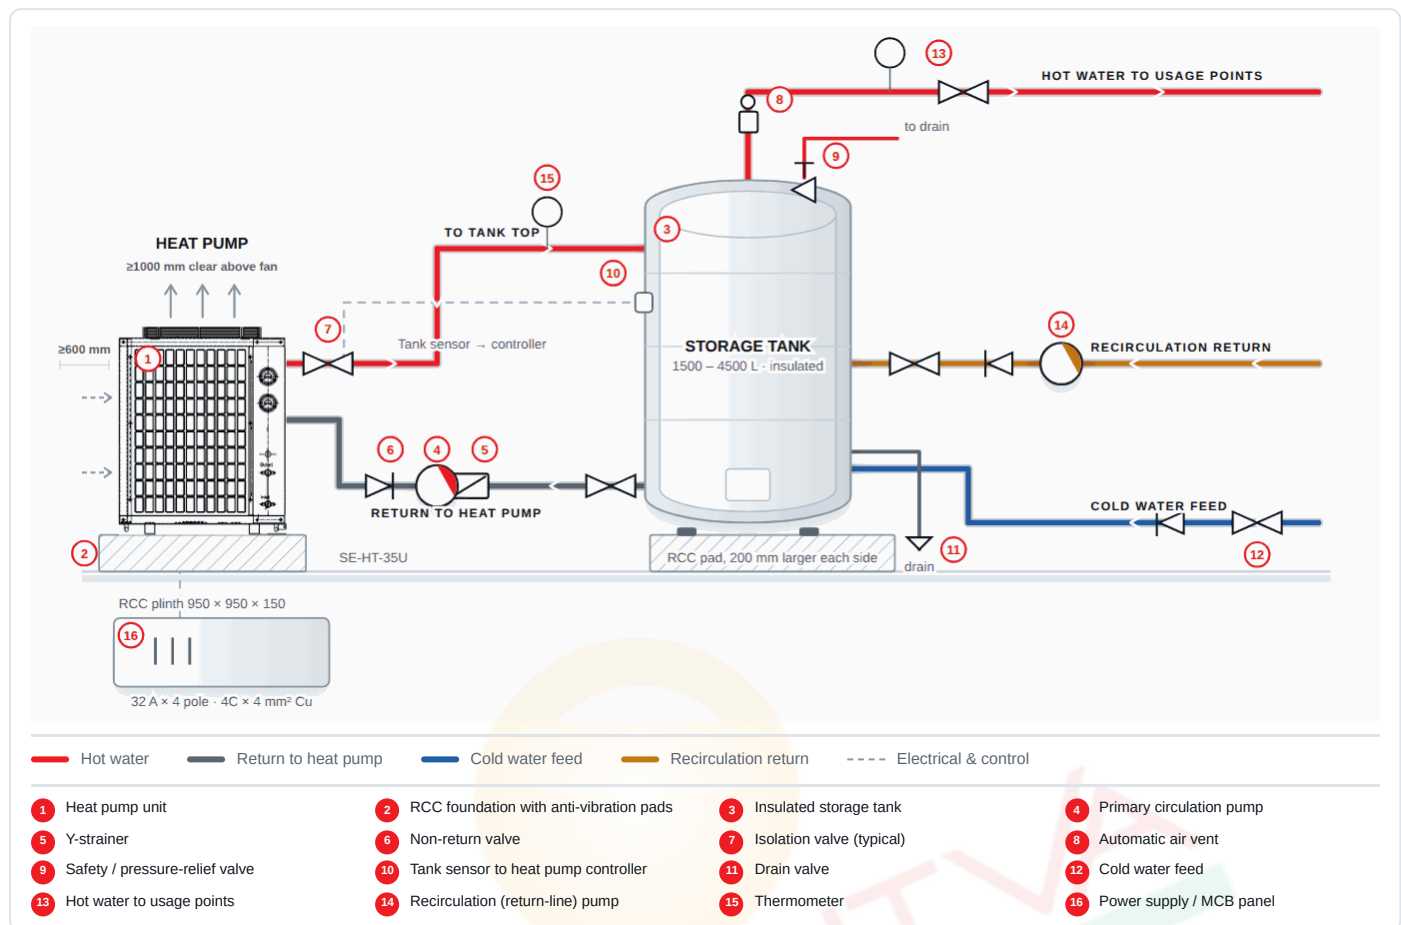

Indicative hookup only. Static head, draw pattern and local code may call for additional components — confirm the final scheme with Sunniva before ordering.

Selection & site preparation Recommended sizing derived from this model's rated data


SYSTEM SIZING		CIVIL & ELECTRICAL	
Storage tank volume	1500 – 4500 L	Unit footprint & dry weight	800 × 800 mm · 350 kg
Tank sizing rule	Hot water output × 2 to 6 LPH measured at 20 °C ambient. Indicative range — stay inside it so the tank is neither undersized nor oversized.	Heat pump plinth	950 × 950 × 150 mm RCC, M20
		Plinth level	100 mm above finished floor, ± 3 mm/m
Primary circulation pump	6.5 m³/hr @ 10 – 12 m head	Tank pad (1500 L)	150 mm RCC, 200 mm larger each side ≈ 1725 kg filled
Recirculation (return) pump	0.7 – 0.9 m³/hr @ 6 – 8 m head	Clearances	600 mm air-on · 1000 mm above fan · 800 mm service side
Primary pipe size	25 mm (R1) to 10 m run; 32 mm beyond	Electrical	32 A × 4 pole MCB · 4 core × 4 sq.mm copper cable + earthing
Line insulation	25 mm closed-cell, every line above 45 °C		

Installation steps Follow in order; commission before start-up

- 1 Cast the RCC plinth **950 × 950 × 150 mm** in M20 concrete, 100 mm above finished floor. Let it cure and check it is level within 3 mm per metre.
- 2 Set the unit down on anti-vibration pads. Keep **600 mm clear** at the finned coil faces and **1000 mm above the fan** — the unit must breathe or capacity drops.
- 3 Place the tank on its own level pad, as close to the heat pump as the site allows. Short pipes lose less heat.
- 4 Pipe **tank bottom → isolation valve → Y-strainer → primary pump → heat pump inlet**, in that order. Fit the non-return valve after the pump.
- 5 Pipe the **heat pump outlet → tank top inlet**. Fit an isolation valve at each end so the unit can be serviced without draining the tank.
- 6 Fit the **automatic air vent** and the **safety valve** on the tank top. Pipe the safety valve discharge to an open drain — never cap it.
- 7 Bring the **cold water feed** into the tank bottom through an isolation valve and a non-return valve.
- 8 Fit the tank sensor into the tank pocket and run its cable back to the heat pump controller. Do not run it alongside the power cable.
- 9 Insulate every hot line with **25 mm closed-cell** insulation, pump body included.
- 10 Power the unit from a dedicated **32 A × 4 pole** MCB using 4 core × 4 sq.mm copper cable + earthing.
- 11 Fill and vent the system fully. Confirm the flow switch stops the unit when the pump is off, then start.

Process & instrumentation diagram

Refrigeration circuit, instrumentation and water connections

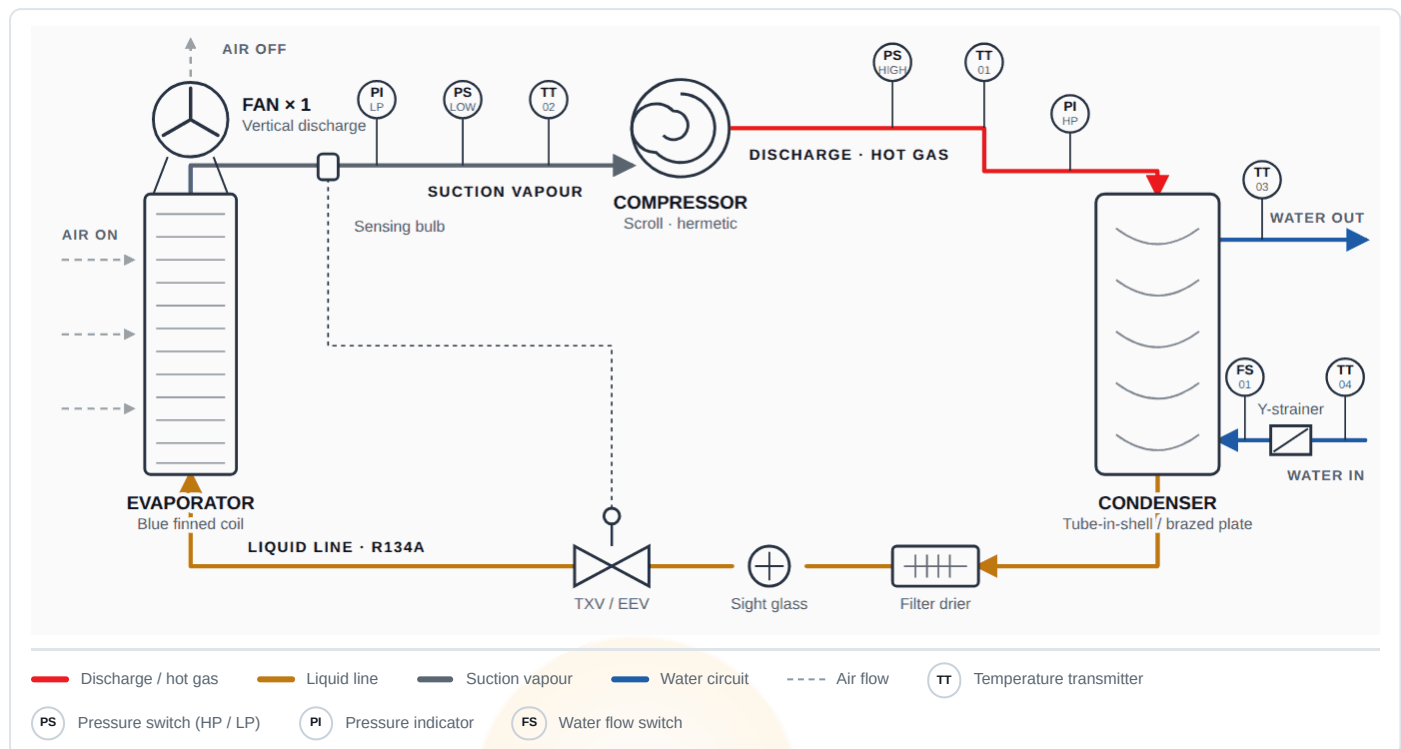

Schematic representation of the standard circuit — not to scale. Component arrangement may vary with build option.

Instrument schedule


Tags as marked on the diagram above

TAG	DEVICE	FUNCTION
TT 01	Compressor discharge temperature	Discharge superheat & high-temperature cut-out
TT 02	Compressor suction temperature	Suction superheat monitoring
TT 03	Water outlet temperature	Set-point control
TT 04	Water inlet temperature	Return water sensing, ΔT calculation
PS HIGH	High-pressure switch	Discharge over-pressure cut-out

TAG	DEVICE	FUNCTION
PS LOW	Low-pressure switch	Loss-of-charge / low-suction cut-out
PI HP	High-side pressure gauge	Discharge pressure indication
PI LP	Low-side pressure gauge	Suction pressure indication
FS 01	Water flow switch	Interlock — no-flow lockout

Cabinet reference drawing

Typical general arrangement — this model's own dimensions alongside

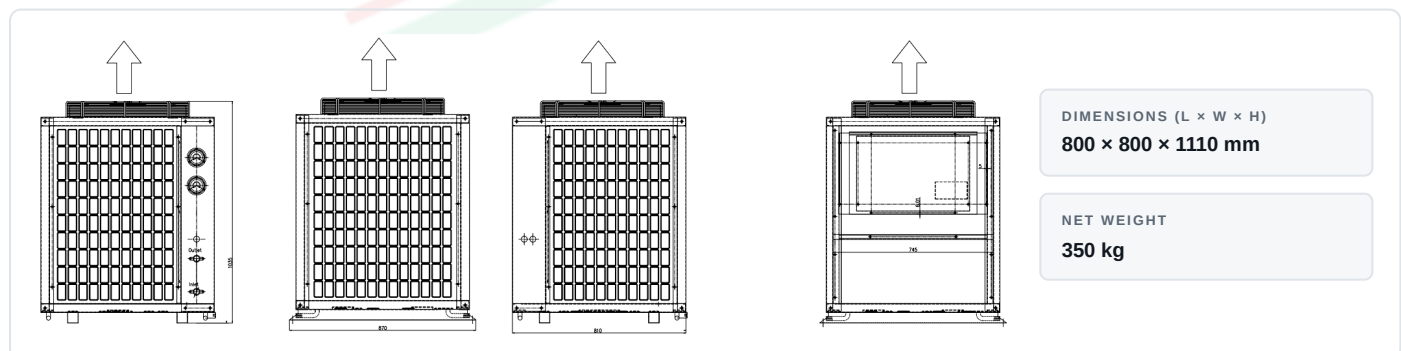


Reference arrangement only — Single-compressor cabinet, vertical discharge. Dimensions printed on the drawing are indicative; the figures above and in the specification table are the ones that apply to this model.

COP characteristic

Full performance map across the operating envelope

COP · heating duty

COP against ambient temperature, one curve per hot-water outlet temperature

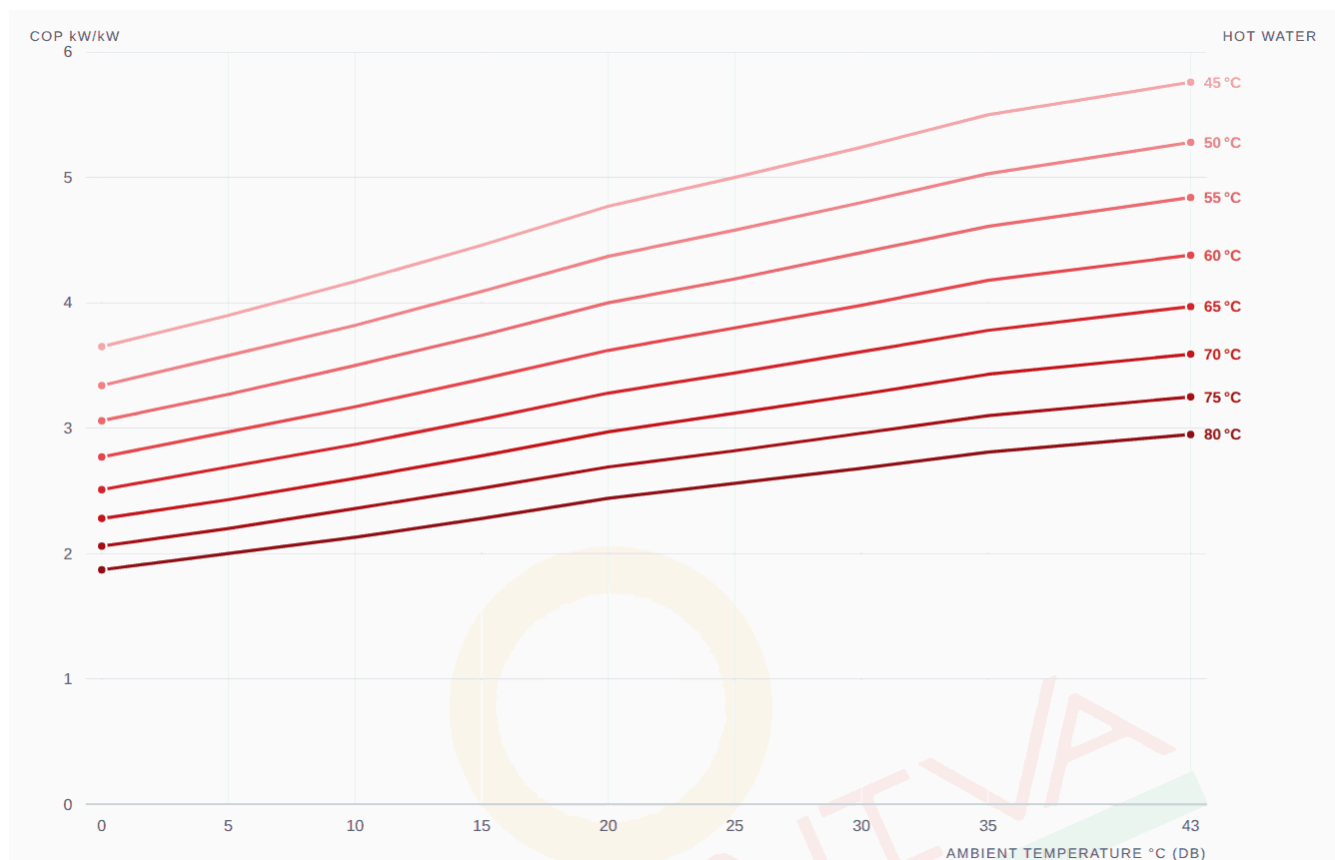

COP · HOT WATER : / AMBIENT °C →	0	5	10	15	20	25	30	35	43
45 °C	3.65	3.90	4.17	4.46	4.77	5.00	5.24	5.50	5.76
50 °C	3.34	3.58	3.82	4.09	4.37	4.58	4.80	5.03	5.28
55 °C	3.06	3.27	3.50	3.74	4.00	4.19	4.40	4.61	4.84
60 °C	2.77	2.97	3.17	3.39	3.62	3.80	3.98	4.18	4.38
65 °C	2.51	2.69	2.87	3.07	3.28	3.44	3.61	3.78	3.97
70 °C	2.28	2.43	2.60	2.78	2.97	3.12	3.27	3.43	3.59
75 °C	2.06	2.20	2.36	2.52	2.69	2.82	2.96	3.10	3.25
80 °C	1.87	2.00	2.13	2.28	2.44	2.56	2.68	2.81	2.95

HOW TO READ THIS

Performance map for the R134A circuit, covering the full 45–80 °C hot-water range. Rated figures at the certified test conditions are on page 1.


Where a figure on this map differs from the rated point on page 1, **the map governs** — it is measured across the full operating envelope, while the rated point is a single certified test condition.

Operating envelope

The compressor's permitted window, in refrigeration terms

Operating envelope · R134A circuit

Condensing against evaporating temperature — the compressor's permitted operating window

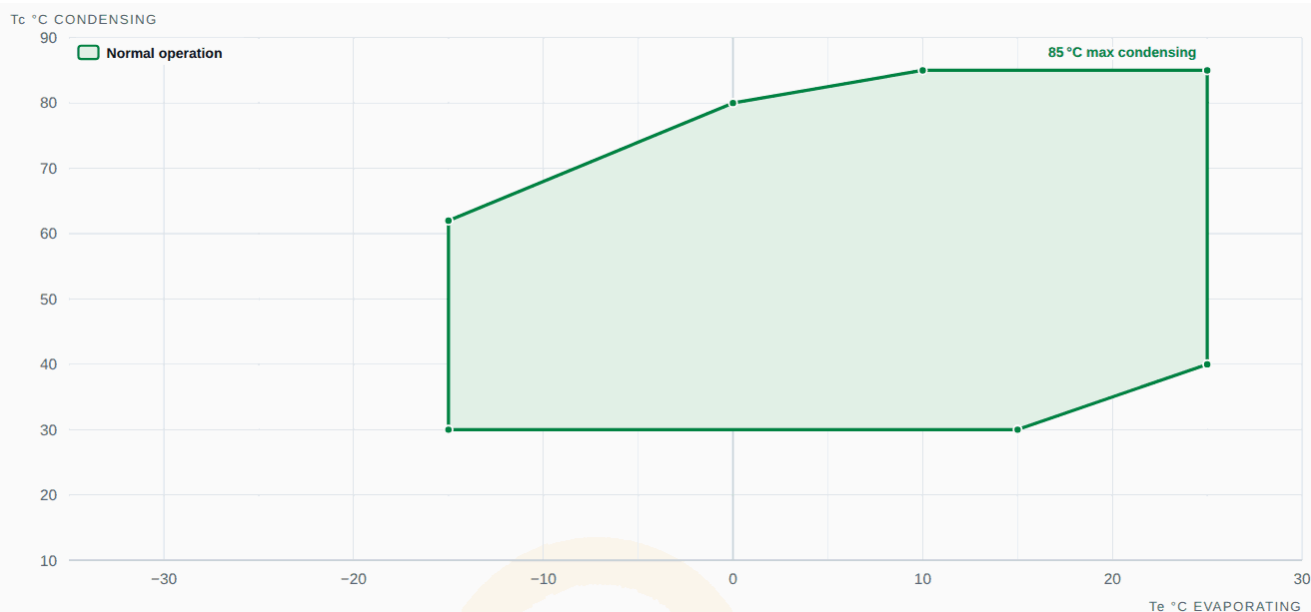

ENVELOPE LIMITS

Evaporating temperature T_e	-15 °C to 25 °C
Condensing temperature T_c	30 °C to 85 °C
Peak condensing	85 °C highest hot-water temperature the circuit can reach
Transient operation	Not applicable the envelope above is the continuous operating window

READING THE ENVELOPE

T_e (evaporating) follows the source the unit draws heat from — the colder the air or source water, the lower T_e sits.

T_c (condensing) follows the water leaving the unit — asking for 80 °C hot water puts T_c near the top of the envelope.

A duty is valid only **inside the shaded area**. A cold source combined with very hot water pushes the point towards the top-left, which is exactly where the envelope closes in — that corner is the real limit on winter performance.

Representative envelope for the R134A circuit, redrawn from Panasonic compressor data (Operating envelop.xlsx, sheet "R134a"). Envelope limits are broadly similar across compressor makes, so treat this as a representation of the circuit's operating window. Where a duty sits close to a boundary, confirm against the compressor fitted to the unit before finalising the design.

Documents & links

Scan with a phone camera to open

TALK TO SUNNIVA

Scan to open a WhatsApp chat



Sales

Enquiries & orders



Service

Breakdowns & spares

DOCUMENTATION

Scan to open the latest revision on sunnivaencon.com



User manual

Installation & operation



Service manual

Fault codes & servicing

CONNECT & REVIEW

Product videos and customer feedback



YouTube

Product videos



Review us

Rate us on Google