

SE-AH SERIES

SE-AH-100V

Air source commercial heat pump for bulk sanitary hot water up to 60 °C. R410A scroll circuit, three-phase, rated down to 5 °C ambient.

www.sunnivaencon.com
+91 93213 65103
sales@sunnivaencon.com



HEATING CAPACITY

100 kW

At T1 · A20 °C / W50 °C

PEAK COP

4.2

At T1 · A20 °C / W50 °C

MAX WATER TEMP

60 °C

Rated outlet 55 °C

HOT WATER OUTPUT

2870 LPH

At T1 · A20 °C / W50 °C

Performance

Rated output at each test condition

T1 A20 °C / W50 °C

Heating capacity	100 kW
Power input	23.8 kW
COP	4.2
Hot water output	2870 LPH

T2 A15 °C / W50 °C

Heating capacity	90.6 kW
Power input	23.3 kW
COP	3.8
Hot water output	2230 LPH

T3 A10 °C / W50 °C

Heating capacity	79.2 kW
Power input	23.2 kW
COP	3.4
Hot water output	1700 LPH

Technical specifications

SE-AH-100V

ELECTRICAL SUPPLY

Power supply	—	380–415 V / 50 Hz / 3 Ph
Rated input power	kW	23.8
Rated current	A	45.6
Required MCB	—	100 A × 4 pole
Required cable	—	4 core × 16 sq.mm copper cable + earthing

REFRIGERATION CIRCUIT

Compressor	—	Scroll (Copeland / Panasonic)
Number of compressors	Nos	2
Refrigerant	—	R410A
Heat exchanger (condenser)	—	Tube-in-shell / Brazed plate heat exchanger
Evaporator	—	Blue finned evaporator coil
Throttling device	—	Electronic expansion valve
Fan quantity	Nos	2

WATER CIRCUIT

Rated water temperature	°C	55
Maximum water temperature	°C	60
Water flow	m ³ /hr	17.3
Water pipe size	inch	R2

UNIT & ACOUSTICS

Dimensions (L × W × H)	mm	2250 × 1090 × 1785
Net weight	kg	820
Noise at 1 metre	dB(A)	≤ 72

TEST CONDITIONS

- T1** — Ambient 20/15 °C (DB/WB), E.T. 10 °C, C.T. 55 °C
T2 — Ambient 15/10 °C (DB/WB), E.T. 5 °C, C.T. 55 °C
T3 — Ambient 10/7 °C (DB/WB), E.T. 0 °C, C.T. 55 °C
T4 — Ambient 5/3 °C (DB/WB), E.T. -5 °C, C.T. 55 °C

INSTALLATION REQUIREMENT

- Dedicated **100 A × 4 pole** MCB required at the unit.
 Supply cable **4 core × 16 sq.mm** copper, with separate earthing.
 Maintain water flow of **17.3 m³/hr** through the unit.

SUNNIVA ENCON LLP

Manufacturer & exporter of heat pumps since 2012

OFFICE

C-443, Oshiwara Industrial Centre
 Premises CHS, New Link Road, Goregaon West, Mumbai

FACTORY

Tirupati Industrial Complex, Plot No. 41,
 Sambhaji Nagar, Asangaon, Maharashtra 421601

CONTACT


+91 93213 65103
 sales@sunnivaencon.com
 www.sunnivaencon.com

Indicative hookup only. Static head, draw pattern and local code may call for additional components — confirm the final scheme with Sunniya before ordering.

- 1 Cast the RCC plinth **2400 × 1240 × 150 mm** in M20 concrete, 100 mm above finished floor. Let it cure and check it is level within 3 mm per metre.
- 2 Place the tank on its own level pad, as close to the heat pump as the site allows. Short pipes lose less heat.
- 3 Pipe the **heat pump outlet** → **tank top inlet**. Fit an isolation valve at each end so the unit can be serviced without draining the tank.
- 4 Bring the **cold water feed** into the tank bottom through an isolation valve and a non-return valve.
- 5 Insulate every hot line with **25 mm closed-cell** insulation, pump body included.
- 6 Fill and vent the system fully. Confirm the flow switch stops the unit when the pump is off, then start.
- 7 Set the unit down on anti-vibration pads. Keep **1000 mm** clear at the finned coil faces and **1500 mm above the fan** — the unit must breathe or capacity drops.
- 8 Pipe **tank bottom** → **isolation valve** → **Y-strainer** → **primary pump** → **heat pump inlet**, in that order. Fit the non-return valve after the pump.
- 9 Fit the **automatic air vent** and the **safety valve** on the tank top. Pipe the safety valve discharge to an open drain — never cap it.
- 10 Fit the tank sensor into the tank pocket and run its cable back to the heat pump controller. Do not run it alongside the power cable.
- 11 Power the unit from a dedicated **100 A × 4 pole** MCB using 4 core × 16 sq.mm copper cable + earthing.

Process & instrumentation diagram

Refrigeration circuit, instrumentation and water connections

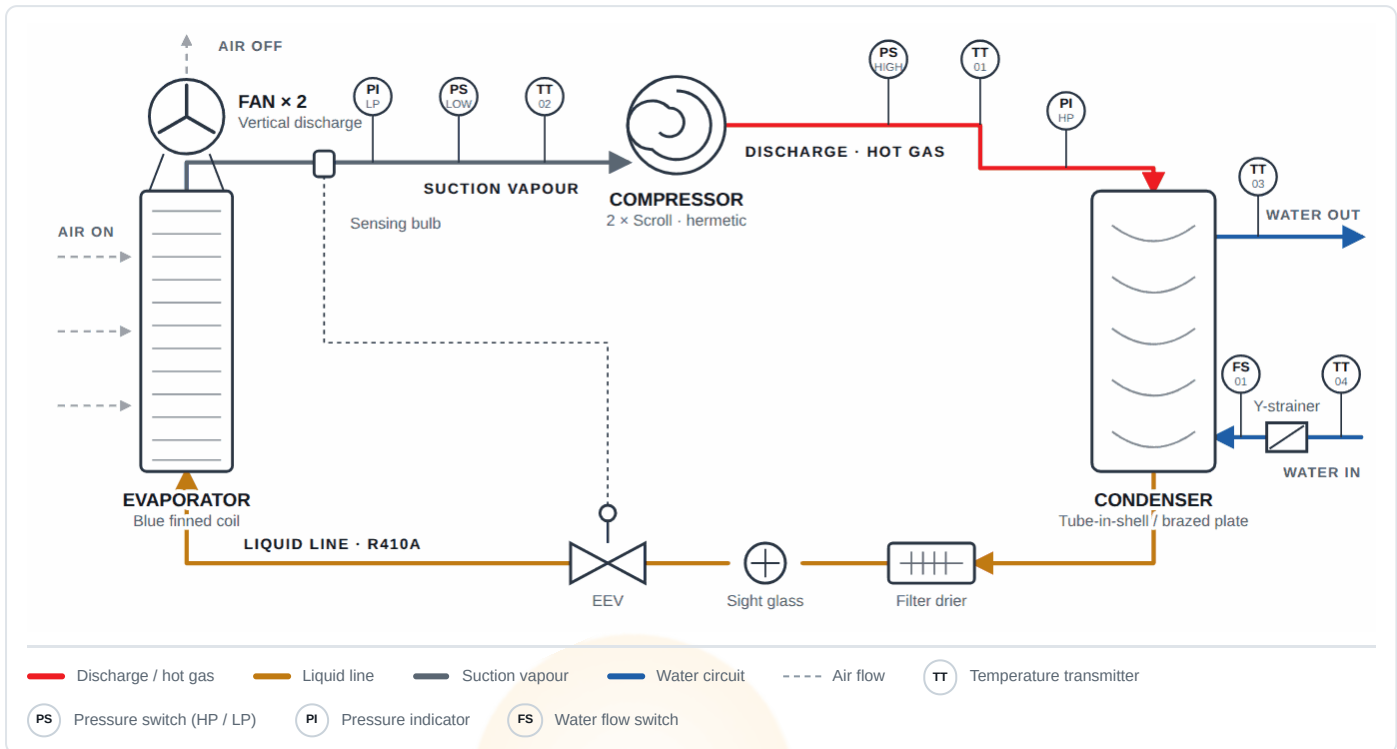

Schematic representation of the standard circuit — not to scale. Component arrangement may vary with build option.

Instrument schedule


Tags as marked on the diagram above

TAG	DEVICE	FUNCTION
TT 01	Compressor discharge temperature	Discharge superheat & high-temperature cut-out
TT 02	Compressor suction temperature	Suction superheat monitoring
TT 03	Water outlet temperature	Set-point control
TT 04	Water inlet temperature	Return water sensing, ΔT calculation
PS HIGH	High-pressure switch	Discharge over-pressure cut-out

TAG	DEVICE	FUNCTION
PS LOW	Low-pressure switch	Loss-of-charge / low-suction cut-out
PI HP	High-side pressure gauge	Discharge pressure indication
PI LP	Low-side pressure gauge	Suction pressure indication
FS 01	Water flow switch	Interlock — no-flow lockout

Cabinet reference drawing

Typical general arrangement — this model's own dimensions alongside

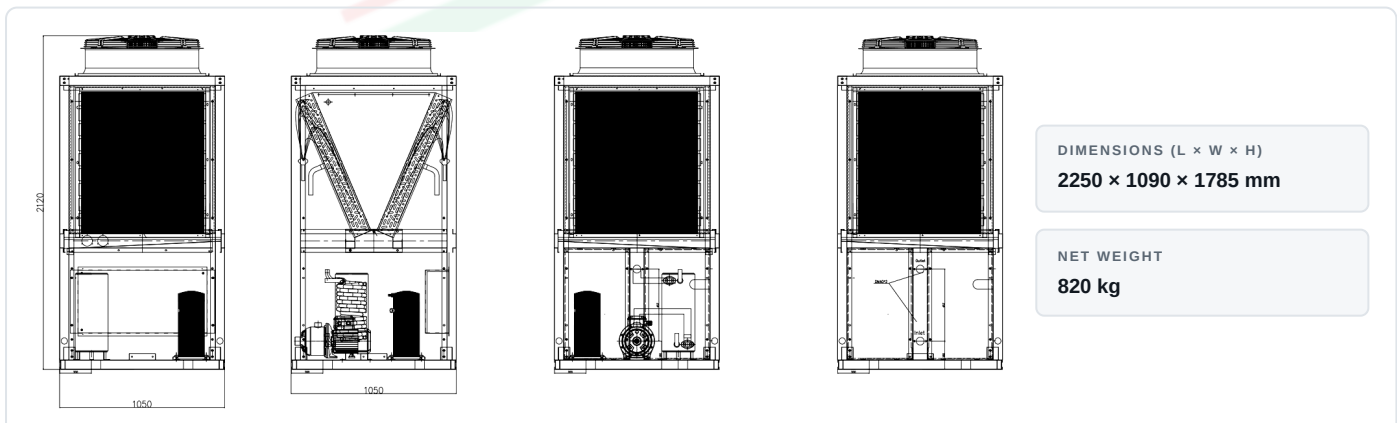

Reference arrangement only — V-coil cabinet, vertical discharge. Dimensions printed on the drawing are indicative; the figures above and in the specification table are the ones that apply to this model.

SUNNIVA ENCON LLP

Manufacturer & exporter of heat pumps since 2012

OFFICE

C-443, Oshiwara Industrial Centre
Premises CHS, New Link Road, Goregaon
West, Mumbai

FACTORY

Tirupati Industrial Complex, Plot No. 41,
Sambhaji Nagar, Asangaon, Maharashtra
421601

CONTACT


+91 93213 65103
sales@sunnivaencon.com
www.sunnivaencon.com

COP characteristic

Full performance map across the operating envelope

COP · heating duty

COP against ambient temperature, one curve per hot-water outlet temperature

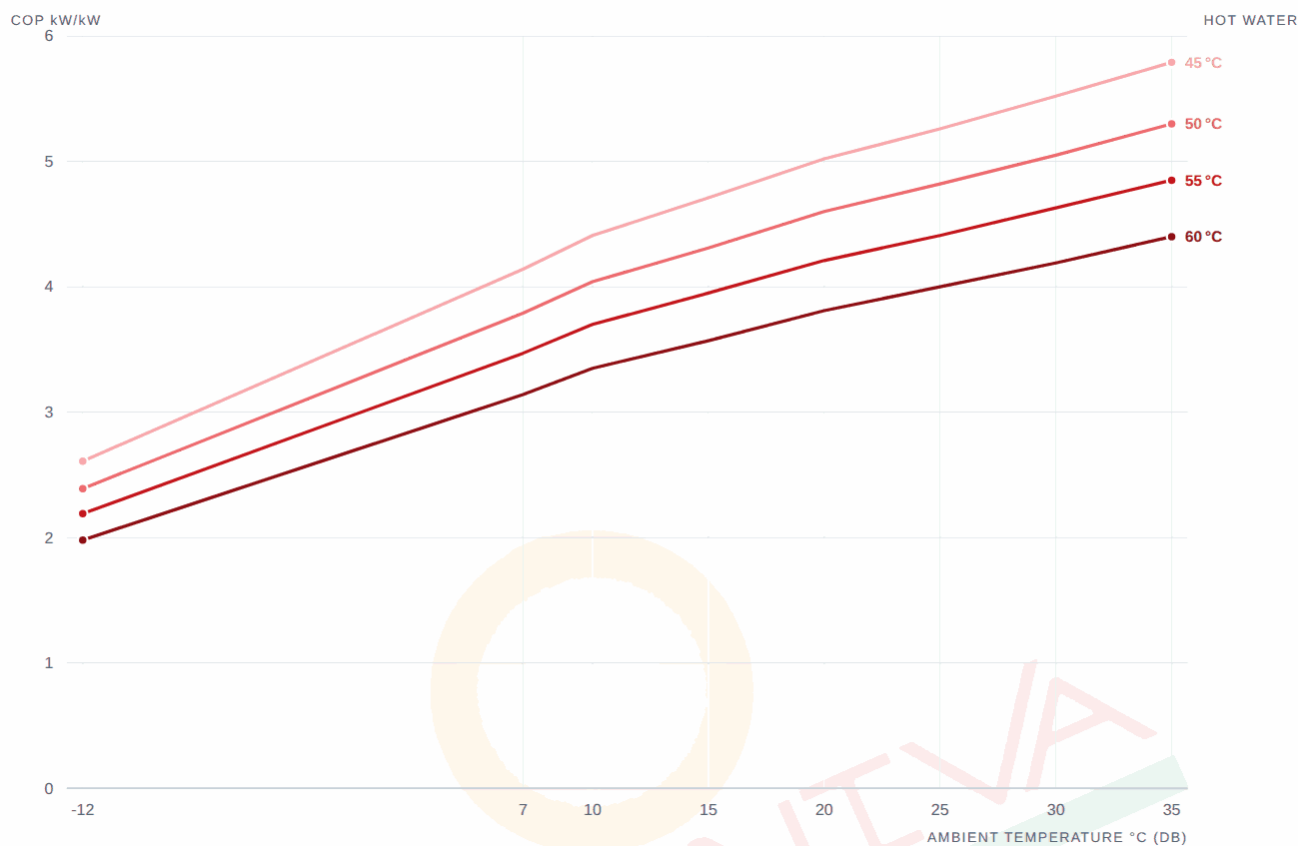

COP · HOT WATER : / AMBIENT °C →	-12	7	10	15	20	25	30	35
45 °C	2.61	4.14	4.41	4.71	5.02	5.26	5.52	5.79
50 °C	2.39	3.79	4.04	4.31	4.60	4.82	5.05	5.30
55 °C	2.19	3.47	3.70	3.95	4.21	4.41	4.63	4.85
60 °C	1.98	3.14	3.35	3.57	3.81	4.00	4.19	4.40

HOW TO READ THIS

Performance map for the R410A circuit. Rated figures at the certified test conditions are on page 1.


Where a figure on this map differs from the rated point on page 1, **the map governs** — it is measured across the full operating envelope, while the rated point is a single certified test condition.

Operating envelope

The compressor's permitted window, in refrigeration terms

Operating envelope · R410A circuit

Condensing against evaporating temperature — the compressor's permitted operating window

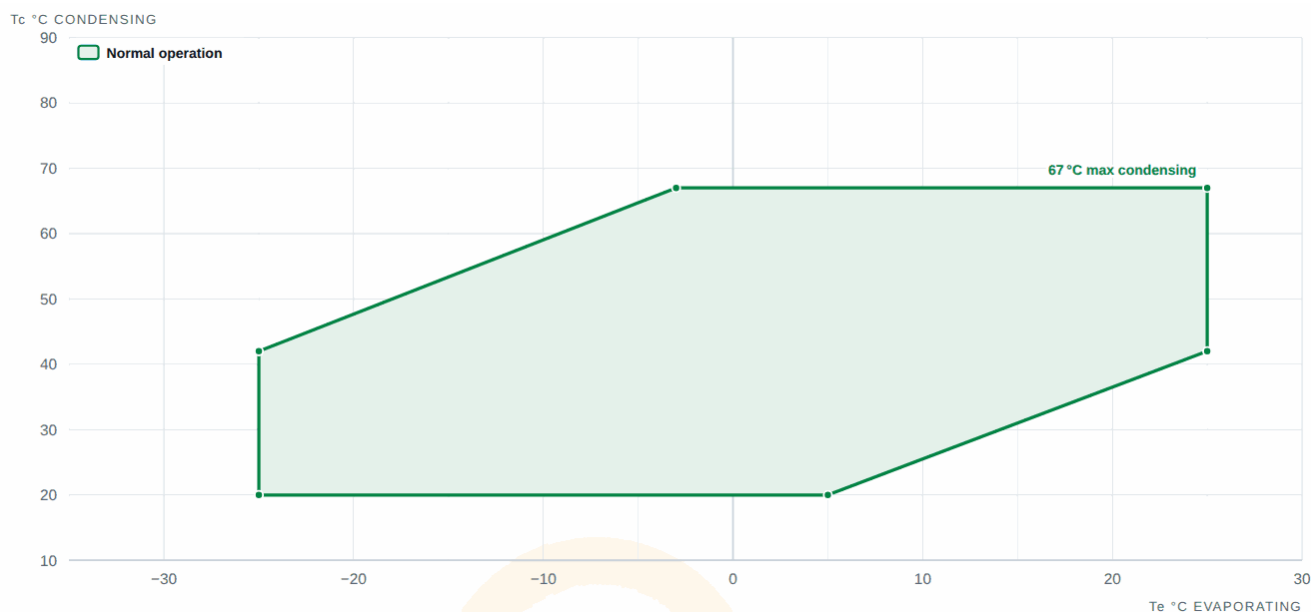

ENVELOPE LIMITS

Evaporating temperature Te	-25 °C to 25 °C
Condensing temperature Tc	20 °C to 67 °C
Peak condensing	67 °C highest hot-water temperature the circuit can reach
Transient operation	Not applicable the envelope above is the continuous operating window

READING THE ENVELOPE

Te (evaporating) follows the source the unit draws heat from — the colder the air or source water, the lower Te sits.

Tc (condensing) follows the water leaving the unit — asking for 80 °C hot water puts Tc near the top of the envelope.

A duty is valid only **inside the shaded area**. A cold source combined with very hot water pushes the point towards the top-left, which is exactly where the envelope closes in — that corner is the real limit on winter performance.

Representative envelope for the R410A circuit, redrawn from Panasonic compressor data (Operating envelop.xlsx, sheet "R410a"). Envelope limits are broadly similar across compressor makes, so treat this as a representation of the circuit's operating window. Where a duty sits close to a boundary, confirm against the compressor fitted to the unit before finalising the design.

Documents & links

Scan with a phone camera to open

TALK TO SUNNIVA

Scan to open a WhatsApp chat



Sales

Enquiries & orders



Service

Breakdowns & spares

DOCUMENTATION

Scan to open the latest revision on sunnivaencon.com



User manual

Installation & operation



Service manual

Fault codes & servicing

CONNECT & REVIEW

Product videos and customer feedback



YouTube

Product videos



Review us

Rate us on Google

SUNNIVA ENCON LLP

Manufacturer & exporter of heat pumps since 2012

OFFICE

C-443, Oshiwara Industrial Centre
Premises CHS, New Link Road, Goregaon West, Mumbai

FACTORY

Tirupati Industrial Complex, Plot No. 41,
Sambhaji Nagar, Asangaon, Maharashtra 421601

CONTACT

+91 93213 65103
sales@sunnivaencon.com
www.sunnivaencon.com